

Spectralink IP-DECT Server 400

Installation and Configuration Guide

Copyright Notice

© 2013 Spectralink Corporation All rights reserved. Spectralink™, the Spectralink logo and the names and marks associated with Spectralink's products are trademarks and/or service marks of Spectralink Corporation and are common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Spectralink.

All rights reserved under the International and pan-American Copyright Conventions. No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, or translated into another language or format, in whole or in part, without the express written permission of Spectralink Corporation.

Do not remove (or allow any third party to remove) any product identification, copyright or other notices.

Notice

Spectralink Corporation has prepared this document for use by Spectralink personnel and customers. The drawings and specifications contained herein are the property of Spectralink and shall be neither reproduced in whole or in part without the prior written approval of Spectralink, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

Spectralink reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Spectralink to determine whether any such changes have been made.

NO REPRESENTATION OR OTHER AFFIRMATION OF FACT CONTAINED IN THIS DOCUMENT INCLUDING BUT NOT LIMITED TO STATEMENTS REGARDING CAPACITY, RESPONSE-TIME PERFORMANCE, SUITABILITY FOR USE, OR PERFORMANCE OF PRODUCTS DESCRIBED HEREIN SHALL BE DEEMED TO BE A WARRANTY BY SPECTRALINK FOR ANY PURPOSE, OR GIVE RISE TO ANY LIABILITY OF SPECTRALINK WHATSOEVER.

Spectralink Corporation,
2550 55th Street,
Boulder CO 80301,
USA

Spectralink Europe ApS,
Langmarksvej 34,
8700 Horsens,
Denmark

Contents

Preface

Important Information Before You Begin	1
Acronyms	2

Introduction to Spectralink IP-DECT Server 400

Overview of the Spectralink IP-DECT Server 400 Solution	4
Requirements	5
Installation Prerequisites	6

Installing Spectralink IP-DECT Server 400

Types and Numbers	7
Appearance and Components	8
LED Indicators	9
Reset Button	9
Installing the Spectralink IP-DECT Server 400	10
Installing the External Antenna	11

Configuring Spectralink IP-DECT Server 400

Powering up the Spectralink IP-DECT Server 400	12
How to Access the Administration Page	12
Configuring Network Settings	13

User and Handset Registration and Subscription

Registration and Subscription	17
Registering Via the Administration Page	19
Subscribing Spectralink Handsets	20
Searching for Handset/User Information	23
Changing or Removing User Configurations	23
Removing Spectralink Handsets from the List (Deregistering)	24
Importing Handset Registration Data - CSV Format	24

System Management

Reading System Information	26
Multicell Installation	32

Regulatory Notices

International Regulatory and Product Information	35
Important Safety Instructions and Product Information	39

Open Source Software Notice

Open Source Software Notice	43
-----------------------------------	----

Chapter 1: Preface

This guide is intended for qualified technicians who will install, configure and maintain the Spectralink IP-DECT Server 400 Solution.

This guide provides all the necessary information for successful installation and maintenance of the Spectralink IP-DECT Server 400. For information about the installation and configuration of the Spectralink DECT Repeaters and the Spectralink Handsets, please download the user guides at www.spectralink.com.

Important Information Before You Begin

This guide assumes the following:

- that users have a working knowledge of PBX operations
- that the PBX is installed and initialized and is working correctly
- that you have a working knowledge of deployment in general
- that a site survey has been conducted and that the installer has access to these plans

Furthermore, you need the information in the following table below to enter the web based Administration Page.

Table 1 Initial System Access

Initial System Access Spectralink IP-DECT Server 400	
IP address of the Spectralink IP-DECT Server 400	DHCP assigned or 192.168.0.1 if DHCP server is not available
User Name	admin
Password	ip6000



Note

The Spectralink IP-DECT Server 400 is pre-configured to use DHCP. If DHCP is not available, it will fall back to static IP address (192.168.0.1) after one minute.

The current IP Address of the Spectralink IP-DECT Server 400 can be discovered using UPnP.

Enabling UPnP

When the Spectralink wireless devices are set up to DHCP, you can use UPnP to discover the wireless devices. The devices appear under Network and Other Devices as “<device name>-<Serial number>”, for example, Spectralink IP-DECT Server 400-8442621

UPnP needs to be enabled on your PC. You enable it from the control panel (Win7) under “Network and Sharing Center”, enter “Change advanced sharing settings” and then enter “Turn on network discovery”.

Acronyms

Table 2 List of Acronyms

Acronym	Description
AC	Authentication Code
ARI no.	Access Rights Identity - Serial number of the Spectralink IP-DECT Server 400
DECT	Digital Enhanced Cordless Telecommunications
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
GAP	Generic Access Profile
IP	Internet Protocol
IPEI	International Portable Equipment Identity - Serial no. of the handset - SN
LAN	Local Area Network
LED	Light Emitting Diode
MAC	Media Access Control - hardware address of a device connected to a network
MTU	Maximum Transmission Unit
MWI	Message Waiting Indication
NTP	Network Time Protocol
PoE	Power over Ethernet
RSSI	Received Signal Strength Indicator
RTP	Real-time Transport Protocol
SIP	Session Initiated Protocol
WRFP	Wireless Radio Fixed Part - Wireless Repeater


Chapter 2: Introduction to Spectralink IP-DECT Server 400

In addition to the Spectralink IP-DECT Server 400, a typical configuration includes a number of the following components:

- Repeaters (optional)
- Handsets and accessories
- Spectralink IP-DECT Base Station (optional)

The Spectralink IP-DECT Server 400 has radio enabled.

Figure 1 Overview of the Whole Solution

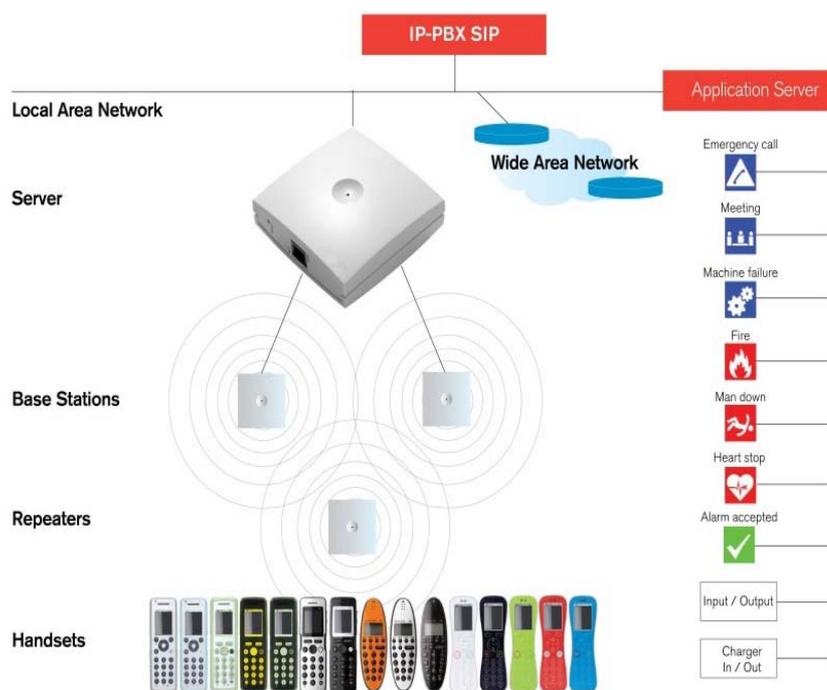

Overview of the Spectralink IP-DECT Server 400 Solution

The following provides an overview of the system capacity of the Spectralink IP-DECT Server 400.

Table 1 Overview of System Capacity

Description	Capacity
Max. number of simultaneous SIP calls via license	12
Max. number of repeaters	3
Max. number of registered handsets via license	30
Max. number of IP-DECT Base Stations	3

- The Spectralink IP-DECT Server 400 controls the Spectralink IP-DECT Base Station if available, and manages the IP interface to the PBX.
- The communication protocol between the Spectralink IP-DECT Server 400 and the PBX is SIP.
- The Spectralink IP-DECT Server 400 is installed directly on the LAN and must be managed as part of the corporate network.

Spectralink IP-DECT Server

The wireless solution supports two wireless bands and that allows operation in various countries and regions. The Spectralink IP-DECT Server 400 has a radio enabled. Supported wireless bands are:

- ETSI (1880-1900 Mhz), referred to as 1G8
- USA DECT (1920-1930 MHz), referred to as 1G9, DECT 6.0

Please note that it is not possible to change the predefined band.

Spectralink IP-DECT Base Station

The Spectralink IP-DECT Base Station has 12 simultaneous traffic channels (32 Kbit/s). The Spectralink DECT IP-Base Station controls the traffic in the air and works as the link between the Spectralink Handsets and the Spectralink IP-DECT Server 400.

For more information about when to use the Spectralink IP-DECT Base Station, download the Spectralink IP-DECT Base Station user guide from: <http://supportdocs.spectralink.com>

Spectralink DECT Repeater

The Spectralink DECT Repeater can be used to extend the coverage area in a wireless solution. The wireless repeater is used in areas with limited voice traffic where cabling is difficult. The repeater does not increase the number of traffic channels, but increases the coverage area established with the base station. The use of repeaters is optional. For more information about when to use repeaters, visit www.spectralink.com.

Spectralink Handset

The handset is a portable unit compatible with DECT GAP standard, and it is designed to provide the subscriber with most of the features available for a wired phone in addition to its roaming and hand over capabilities.

The Spectralink IP-DECT Server 400 supports up to 30 registered handsets via license.

Spectralink Maintenance Software

You use the web based user interface to manage the Spectralink IP-DECT Server 400. From the web based user interface, you can also manage and configure the IP-DECT Base Stations and configure user data and SIP settings.

- ServiceTool. The service tool is used for programming the repeater, and for downloading software to the repeater. You can download the ServiceTool application from www.spectralink.com.

Requirements

Environmental Requirements

The installation area must be:

- clean, free of traffic and excess dust, dry, and well ventilated
- within the temperature ranges of 10°C and 40°C/50°F and 104°F
- between 20% and 80% non-condensing relative humidity

Electrical Requirements

The IP-DECT server 400 can be powered in two ways: via PoE by a PoE device or using a power supply.

The IP-DECT Server 400 uses the Power over Ethernet standard (PoE 802.af). The maximum consumption is 3.0W (IEEE 803.af Class 1 device). Use an 8VDC power supply when using a power supply as power source.

The PoE adaptor or power supply must be purchased separately.

Installation Prerequisites

Before you start the installation, ensure:

- that network connectivity is available -10/100 Mbit/s Ethernet
- that the device is powered up - light in from led.
- that a SIP PBX is available

Chapter 3: Installing Spectralink IP-DECT Server 400

Before you install the equipment, ensure that a site planner defines the location of the Spectralink IP-DECT Server 400.

Types and Numbers

The Spectralink IP-DECT Server 400 contains RF circuitry that complies with the local band standards: ETSI DECT and USA DECT 6.0. The table below includes a list of available Spectralink IP-DECT Server 400 servers and their part numbers.

Table 1 Spectralink IP-DECT Server 400 Part Numbers

	Number
Spectralink IP-DECT Server 400 1.8 GHz	02344500
Spectralink IP-DECT Server 400 1.9 GHz	02344501
Spectralink IP-DECT Base Station 1G8	02337400
Spectralink IP-DECT Base Station 1G9	02337401
Power supply for Spectralink IP-DECT Server 400	84642600
PoE Adapter, EU version	02319600
PoE Adapter, UK version	02319601
PoE Adapter, US version	02319602
PoE Adapter, AU version	02319603
External Antenna	02319507
Cables for External Antenna	02319507
4 CH Multi Cell Repeater 1G8	02334601
2 CH Multi Cell Repeater 1G8	02440000
4 CH Multi Cell Repeater 1G9	02338200
2 CH Multi Cell Repeater 1G9	02441200
Power supply Repeater	84642602

Appearance and Components

The Spectralink IP-DECT Server 400 front cover includes the following:


- LED indicating the operating status of the unit

Figure 1 Spectralink IP-DECT Server 400 - Front view



The Spectralink IP-DECT Server 400 faceplate includes the following:

Figure 2 Spectralink IP-DECT Server 400 - Faceplate

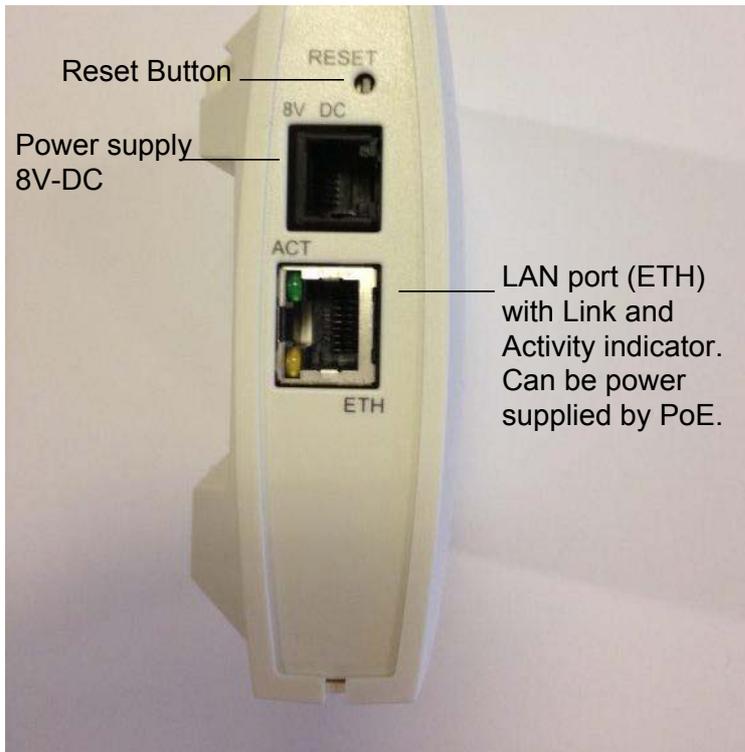

LED Indicators

Table 2 LED Indicator Description - Front Cover

LED Indicator	Meaning
Steady green	OK and idle
Slow green flashing	OK and active voice call
Red flashing	Error or rebooting

Table 3 LED Indicator Description - Faceplate

LED Indicator	Meaning
LINK Indicator - green	Link layer software has established connection
Activity Indicator - yellow	Activity

Reset Button

It is possible to restart or reset the Spectralink IP-DECT Server 400 by pressing the Reset button on the faceplate of the Spectralink IP-DECT Server 400.

Table 4 Reset Button Description

Press button	Action
Short press (2 to 5 sec.)	System restarts when button is released.
Long press (5 to 9 sec.) until front LED flashes red, then release button	Resets the system to factory default settings (original IP settings and empty user data base) and restarts the system. Firmware version is not affected.

Installing the Spectralink IP-DECT Server 400

The Spectralink IP-DECT Server 400 is suitable for mounting indoors on a wall.

- 1 Mount the Spectralink IP-DECT Server 400 on the wall, using the anchors and screws provided.
You can also mount the Spectralink IP-DECT Server 400 upside down.

When you place the Spectralink IP-DECT Server 400 on the screws, ensure that the screws do not touch the printed circuit board.

Figure 3 *Spectralink IP-DECT Server 400 Wall Mounting*




Installing the External Antenna

You connect the external antenna to the Spectralink IP-DECT Server 400 by removing the brick on the rear side and mounting the cable to the external antenna as shown in the following figure. The external antenna is mounted on the wall in the same way as the Spectralink IP-DECT Server 400.

For information on how to use and place the external antenna, refer to the deployment guide.

Figure 4 External antenna

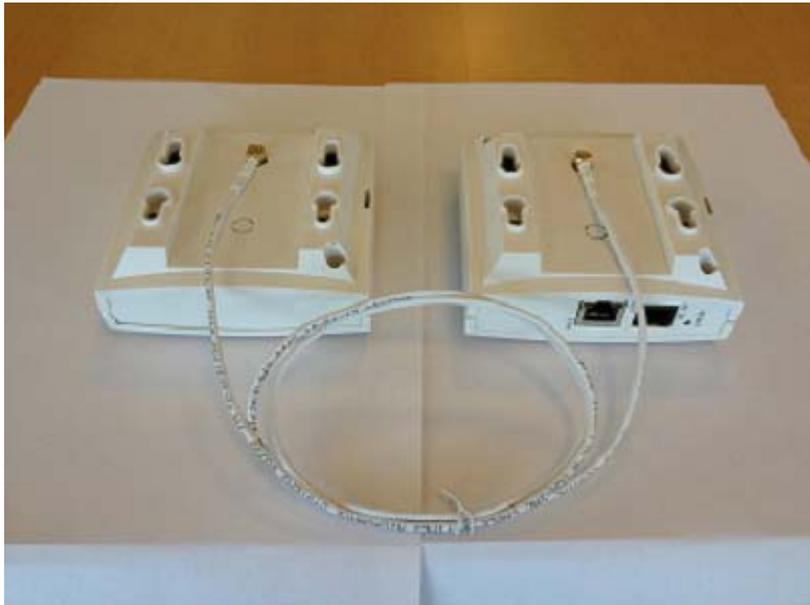

Left: external antenna

Right: Spectralink IP-DECT Server 400

Chapter 4: Configuring Spectralink IP-DECT Server 400



Note

If additional IP Base stations are added to the system, it is recommended to use a static IP address for the server.

The current IP Address of the Spectralink IP-DECT Server 400 can be discovered using UPnP

Powering up the Spectralink IP-DECT Server 400

After installing the Spectralink IP-DECT Server 400 you need to power up the unit using PoE or PSU. The PSU must be ordered separately: part number 84642600.

How to Access the Administration Page

The web based Administration Page is accessed through a standard web browser. To access the web page, you need the following information.

Table 1 System Access

Initial System Access Spectralink IP-DECT Server 400	
IP address of the Spectralink IP-DECT Server 400	DHCP assigned or 192.168.0.1 if DHCP server is not available.
User Name	admin
Password	ip6000

- Point your browser to <http://<IP Address>>

Figure 1 Main page of the Administration Page for Spectralink IP-DECT Server 400

Status	Configuration	Users	Administration	Firmware	Statistics
General	Log	Wireless Server	Packet Capture	Network Diagnostics	
General Status					
General					
IP address	172.29.194.78				
NTP Server	193.162.159.194				
Time	04-01-2013 14:32:00				
Serial	8389545				
MAC address	00:13:d1:80:03:a9				
Product ID	0001 SCEFA660 19C6				
Production Date	Before 31-08-2011				
Hardware					
PartNo	14135720				
PCS	PCS10_				
Firmware					
PartNo	14188000				
PCS	PCS13_				
Build	40447				
Quick status					
SIP	✓				
Provisioning	⊗				
NTP	✓				

Configuring Network Settings



The Spectralink IP-DECT Server 400 is pre-configured to use DHCP. If DHCP is not available, it falls back to static (192.168.0.1) after one minute.

The current IP Address of the Spectralink IP-DECT Server 400 can be discovered using UPnP.

Configuration

On the **Configuration/General** page you define the network settings for the Spectralink IP-DECT Server 400.

- 1 Click **Configuration**, and then click **General**.
- 2 Make the preferred changes, and then click **Save**.

Figure 2 Adm. Page Spectralink IP-DECT Server 400: Configuration/General page

IPV4

Select the preferred method: **Use Static IP Address** or **DHCP Assigned**.

If you select DHCP, the IPV4 configuration is completed. Otherwise, specify IP address, Netmask, Gateway, and MTU size (optional) according to you network options.

Ethernet

Set the VLAN identifier to match your VLAN (optional). According to IEEE 802.1Q values between 0 and 4094 are valid.

DNS

Specify the hostname of the Spectralink IP-DECT Server 400 (optional). Must be DNS resolvable.

Specify the network domain and the primary and secondary DNS servers.

NTP

Specify the NTP server IP address or hostname, and set the time zone.

The NTP server is important. If the NTP server is not specified, the Certificates are not valid and system may not work properly.

UPnP

Enable or disable UPnP.

Enable UPnP broadcast. If you do not enable UPnP broadcast, it may cause unnecessary network broadcast traffic.

Remote Syslog

Specify the address of the syslog server, specify the port that is being used, the facility (see RFC5424 for details), and the level of logging that is required.

Changing the Administration Password

On the **Security Configuration** page, you can change the password and allow remote logging. It is highly recommended that you change the password.

- Click **Configuration** and then click **Security**.
- Make the preferred changes, and then click **Save**.

Figure 3 Adm. Page Spectralink IP-DECT Server 400: Configuration/Security Configuration page

Security Configuration

Administrator Authentication

Current password *

New username *

New password

New password again

Remote Access

Force secure HTTP (TLS)

Allow remote logging

*) Required field **) Require restart

SIP Configuration

On the **Configuration/SIP** tab, you define general SIP settings, information about authentication, DTMF signalling, message waiting indication and media.

Figure 4 Adm. Page Spectralink IP-DECT Server 400: Configuration/SIP page

SIP Configuration

General

Local port * **

Transport * **

DNS method * **

Default domain * **

Register each endpoint on separate port * **

Send all messages to Use separate local ports for each endpoint instead of using the global local port.

Registration expire(sec) *

Max forwards *

Client transaction timeout(msec) *

SIP type of service (TOS/Diffserv) * **

SIP 802.1p Class-of-Service *

GRUU

Use SIPS URI

TLS allow insecure **

Proxies

	Priority	Weight	URI
Proxy 1 **	1	100	<input type="text"/>
Proxy 2 **	2	100	<input type="text"/>

General

Contains the basic SIP settings. In most cases, you only have to change the “Default Domain” to enable interaction with various PBX systems, if your PBX requires special settings, these are described in the installation guides for the specific PBX types (for example, Cisco, Microsoft Lync, and so on).

All other settings can be left as they are.

Proxies

Enter the URI or Host names of the relevant proxies. Set the Priority or Weight to match those of your PBX setup. Priority is between 1-4, and Weight is set to maximum 100 in total if changed from the default setting.

Authentication

Specify if a default user is used for SIP registers. An entry under each user overrides this setting.

DTMF Signaling

Specify if you want to use RTP(rfc2833) and payload type - or SIP INFO and tone duration for DTMF tones. If you choose both, the DTMF tone is send twice. The default settings are: RTP and 96 as payload.

Message waiting indication

Specify whether to enable or disable MWI indication to the handsets. You also set Subscription and time for re-subscription here.

Media

Specify any special requirements to fit your network settings for media, including TOS/Diffserv, IEEE 802.1P setting or starting port range. The ports increase by one per initiated call.

You can set Codec priority individually, and change the order as desired. Note that some codecs are only offered if a license is loaded on IP-DECT Server 400.

SDP settings are also specified here. Note that several advanced settings are not visible unless special licences are loaded on the server.

Call status

Specify if hold tone should be played, status messages should be displayed in the handsets, # ends dialing, and specify if call waiting should be enabled.

Chapter 5: User and Handset Registration and Subscription



Note

In addition to registering the handsets, you also have to register the users on the SIP-PBX. For registering users on the PBX, refer to the PBX user guide.

Registration and Subscription

When you register a handset, you enter information about the handset settings such as the handset serial number (IPEI), name, etc., in the system database. You use the web based administration page named Users to enter the information.

When you subscribe a handset, you subscribe a registered handset to the system for usage. The subscription is carried out using the handset itself. If the handset is not registered in the system database, subscription of the handset is not possible.

Registering Spectralink Handsets

When you register a handset, you can either use the web based user page on the Spectralink IP-DECT Server 400 or you can use provisioning (see the provisioning guide on www.spectralink.com).

Each handset in the wireless solution must be programmed into the Spectralink IP-DECT Server 400 before the handset can be used. The IPEI (serial number) is a unique fingerprint of a handset. The serial number is programmed into the handset during the manufacturing process and cannot be changed by field personnel.

The following options are available when you register handsets on a Spectralink IP-DECT Server solution:

- Register with IPEI number
- Register without IPEI number
- Auto create users

Register with IPEI number

To register a handset with an IPEI number, use the web based Administration Page of the Spectralink IP-DECT Server 400. For each user you have to enter a user name from the PBX system and the IPEI number of the handset. If required, you must also enter SIP information and a subscription Access Code (AC).

Populating the IPEI field:

You can find the IPEI number in three places:

- In the handset menu under “Menu/Status/Firmware Version “,
- On the label back of the handset,
- On the packing box.

To enter the IPEI

Enter the 12 digit IPEI number. The first 5 digits represent the vendor code (05003) and the last 7 digits represent the serial number of the handset (0058725). The last digit is a control digit and can be ignored.

- You must enter the IPEI number as follows: “050030058725”.
- A space is added automatically, when you press Save.
- The Username/Extension field must be populated with the URI from your PBX system (for example, Number: 3247 or SIP-URI: John.Doe)

Register without IPEI number

All Spectralink IP-DECT Servers support the registration of handsets without entering the IPEI number,

This is helpful when many similar handsets are deployed because it requires less information on each user.

When you have created the handset with Username/Extension, AC code and SIP information, you subscribe the handset to the DECT system and the handset auto populates the first available user in the database with the IPEI details.

Auto Create Users

This feature is widely used in Spectralink IP-DECT Server solutions because the administrator does not have to enter the IPEI number manually.

- To enable Auto Create Users, go to the web based **Administration Page** under **Configuration/Wireless Server**, and then select the **Autocreate Users** box.

When the handset is subscribed to the Spectralink IP-DECT Server 400, the user is created with the IPEI field populated.



Note

All Auto Create user handsets must be manually enabled by the administrator.

Registering Via the Administration Page

To register handsets you use the web based Administration Page of the Spectralink IP-DECT Server 400.

- 1 Click **Users** and then click **User List**.

Figure 1 Adm. Page Spectralink IP-DECT Server 400: Users/User List page

User List						
Users overview						
		Users	Subscribed	Registered		
Total		2	2	2		
Listed		2	2	2		

Enabled	User	Displayname	IPEI	Handset - Firmware	Subscription	Registration
✓	5003	5003	00077 0903259	KIRK 8020 - 12V	✓	✓
✓	5004	5004	00464 0850301	-	✓	✓

Figure 2 Adm. Page Spectralink IP-DECT Server 400: Users/User List/User page

User

DECT

IPEI

Access code

Standby text

SIP

Username / Extension *

Domain

Displayname

Authentication user

Authentication password

Disabled

Features

Call forward unconditional

*) Required field

The data configured for each handset can be split into two categories.

- DECT data which is necessary for the correct handling of the DECT protocol stack.
- SIP data which is necessary for the handling of a SIP user agent.

- 2 In the **IPEI** field, type the IPEI number of the handset (optional). The serial number consist of a five-digit handset type (manufacturer code) and a seven-digit handset number.

- 3 In the **Access code** field, type the authentication code (AC) (optional)

The authentication code is a subscription password of a maximum of eight digits, defined by the technicians, and can be used when subscribing the handset to a Spectralink IP-DECT Server 400. The authentication code is a subscription pin code for the individual handset.

- 4 In the **Standby text** field, type a text to be displayed when the handset is idle (optional). A maximum of 12 digits is allowed.

- 5 In the **Username/Extension** field, type the user part of the SIP URI configured in the PBX, for example, 1234 in John Doe<sip:1234@somecompany.com>.

- 6 In the **Domain** field, type the domain part of a SIP URI, e.g. somecompany.com in John Doe<sip:1234@somecompany.com> (normally not recommended).
If this is not configured, the default domain configured under SIP settings is used.
- 7 In the **Display name** field, type the name to be displayed (caller ID), e.g. John Doe in **John Doe**<sip:1234@somecompany.com> (optional).
- 8 In the **Authentication User** field, type the user name from the SIP register if different from the user name that is configured in the user name or extension field. If the **Authentication User** field is left blank, the input from user name or extension is used. (Optional)
- 9 In the **Authentication password** field, type the password from the SIP register (optional).
- 10 In the **Call forwardunconditional** field, type the extension number that calls should be forwarded to unconditionally. For more flexibility, perform this operation on the handset. See the handset user guide for more information.

For information on how to subscribe the Spectralink Handsets, please refer to the handset user guides at www.spectralink.com.

Subscribing Spectralink Handsets

When a Spectralink 7520/7540 Handset, Spectralink 7620/7640 Handset, Spectralink 7710/7720/7740 Handset, or Spectralink Butterfly Handset is subscribed to a Spectralink IP-DECT Server system, the handset is first registered on the system. The remaining part of subscription process is then performed on the handset.

The Spectralink IP-DECT Server function “Enable Subscription” must be enabled before the subscription process can be carried out.

The following subscription options are available:

- Automatic subscription of handsets
- Manual subscription of handsets (create login)

Before subscribing handsets you need to ensure:

- that the handset battery is fully charged
- that the handsets are registered in the system.

Auto Subscription of Handsets

When a handset is powered up the first time, a login screen is displayed. An Access Code (AC) field and a User ID field are displayed. The fields are optional and can be left blank by pressing OK. If the handset is to be subscribed to a specific user on the server, the fields must be filled in.

The User ID is the User ID that is entered in the Username/Extension field on the User page in the Spectralink IP-DECT Server.

The AC code is either the AC code that was entered on the User page, or the general AC code that was entered under “Wireless configuration” in the web interface.

To use the Auto Subscription

- 1 Start up the handset. The menu displays **Auto Subscription**.
- 2 Enter an **Access Code** and **User ID**, and then press **OK**.

- 3 The handset subscribes to Spectralink IP-DECT Server 400



Note

If more systems are available, the auto subscribe function may not function properly. If the auto subscription process continues to fail, follow the manual handset subscription procedure.

Manual Subscription of Handsets

To create a login, the system must allow subscriptions to be made. If more than one system currently permits subscription, you need to know the ARI Code of the system to which you want to subscribe.

You can subscribe Spectralink handsets on up to 15 different systems. Except the Spectralink Butterfly handset, which can be subscribed only on 2 systems.

- 1 Press **Menu** to enter the main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Create login** and press **Select**. The handset searches for a system.
- 6 Scroll to the system ARI number and press **Select**.
- 7 Enter the **Access Code** if a code has been configured in the system, and then press **OK** to connect to the system.

Subscribing a Handset to Multiple Systems

You can subscribe Spectralink Handsets on up to 15 different systems. Except the Spectralink Butterfly handset, which can be subscribed only on 2 systems.



Note

To be able to log on to a system, handset subscription must be enabled.

Changing to another System Automatically Using Auto Login



Note

Only use Auto Login when systems are separate, with no overlaps.



Note

To activate Auto login your handset must be subscribed to at least two systems.

- 1 Press **Menu** to enter the main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Auto login** and press **Select**.
- 6 If **Off** is selected, press **Change** to select **On**.
The handset automatically selects a system.
The selected system is marked with an **A**.

Changing to Another System Manually

If you would like to change to another system:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Select login** and press **Select**.
- 6 Scroll to the desired login and press **Select**.

Searching for Handset/User Information

You can search for registered users and handsets using the Administration Page.

- 1 Click **Users**, and then click **List Users**.
- 2 Type the beginning of the user, display name or IPEI you want to search for in the text field, and then click **Search**.

Figure 3 Adm. Page Spectralink IP-DECT Server 400: Search for Users/List Users page

Users overview			
	Users	Subscribed	Registered
Total	50	5	50
Listed	50	5	50

Displayname	IPEI	Sw PartNo - Pos	Subscription	Registration
Finn	00077 0373246	14096000 - 06N	●	●
Heidi Klum	00077 0365402	00000000 -	●	●
Pp 2502	00077 0350586	14096000 - 06E	●	●
Pp 2503	00077 0218587	13309910 - 04N	●	●
pp 2507	00077 0433902	14096000 - 06E	●	●
pp 2508	00077 0368144	14121100 - 04D	●	●
pp 2509	00077 0315201	13309910 - 04N	●	●
pp 2510	00077 0069005	13309910 - 04N	●	●

Changing or Removing User Configurations

You can change user configurations, such as the authentication code (AC) or standby text, by using the web based Administration Page.

- 1 Click **Users**, and then click **User List**.
- 2 Change settings, and then click **Save**.

Figure 4 Adm. Page Spectralink IP-DECT Server 400: Users/User List/User page

User 5003

DECT

IPEI 00077 0903259

Access code

Standby text 5003

SIP

Username / Extension * 5003

Domain

Displayname 5003

Authentication user 5003

Authentication password ●●●●

Disabled

Features

Call forward unconditional

Save Delete Cancel

* Required field

Removing Spectralink Handsets from the List (Deregistering)

You can deregister handsets from Spectralink IP-DECT Server 400. This is necessary when you have to replace the handset due to loss or breakage.

- 1 Click **Users**, and then click **User List**.
- 2 Type the beginning of a number or name to search for in the text field, and then click **Search** or select the handset in question by clicking on the user information. The following page appears

Figure 5 Adm. Page Spectralink IP-DECT Server 400: Users/User List /User page

Importing Handset Registration Data - CSV Format

You can import handset registration data in CSV format. To be able to import the data correctly, you must create a file containing the following information and punctuation:

#IPEI,access code,standby text,username,domain,displayname,authenticate user,authenticate password,local number



Note


If you want to leave out some of the information such as standby text, you must keep the commas, for example: **#IPEI,access code,username,domain,displayname,authenticate user,authenticate password,local number**.

Figure 6 Example of Handset Registration Data in CSV Format

	A	B	C	D	E	F	G	H	I	J	K	L	M	N
1	#IPEI	access code	standby text	username	domain	displayname	authenticate user	authenticate password	local number					
2	000770000100	,IP6000	,2631	,RFP Test	,2631	,2631								
3	000770000101	,IP6000	,2632	,RFP Test	,2632	,2632								
4	000770000102	,IP6000	,2633	,RFP Test	,2633	,2633								
5	000770000103	,IP6000	,2634	,RFP Test	,2634	,2634								
6	000770000104	,IP6000	,2635	,RFP Test	,2635	,2635								
7	000770000105	,IP6000	,2636	,RFP Test	,2636	,2636								
8	000770000106	,IP6000	,2637	,RFP Test	,2637	,2637								

1 Click **Users**, and then click **Import/Export**.

Figure 7 Adm. Page Spectralink IP-DECT Server 400 Version 3.0: Users/Import/Export page

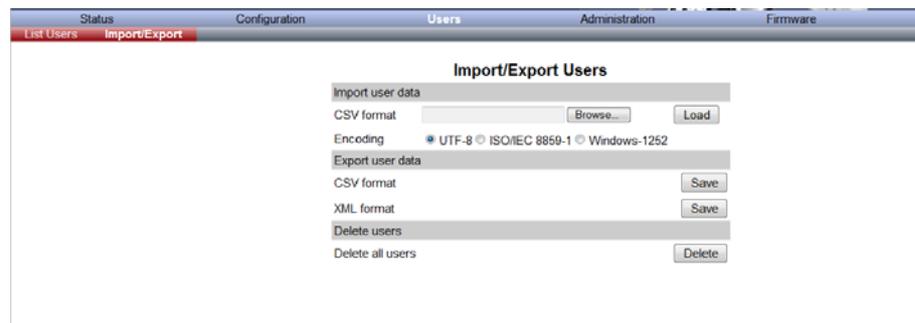

- 2 Under **Import User Data**, click **Browse** to locate the .CSV file that contains the handset registration data.
- 3 Select the **Encoding** the system requires.



Note

It is not possible to import handset registration data already registered in the system.

Chapter 6: System Management

Reading System Information

Under **Status** it is possible to get general information about hardware version, firmware and message logging. This information is useful in case of problem solving. Accessing the Administration Page of the IP-DECT Server provides an overview of the solution.

In the following, you will find information about General Status, Logs, Wireless Server and Packet Capture.

System Information

This page provides general system information such as hardware, firmware and OS Status information.

On the Status/General page you find information about:

- the current firmware and hardware
- MAC Address of the system
- NTP Server; from which IP address the system receives its time information
- Time; time information - if a time server is valid

Figure 1 Adm. Page Spectralink IP-DECT Server 400: Status/General page

The screenshot shows the administration interface for a Spectralink IP-DECT Server 400. The top navigation bar includes tabs for Status, Configuration, Users, Administration, and Firmware. Under the Status tab, there are sub-tabs for General, Logs, Wireless Server, Packet Capture, and Network Diagnose. The main content area displays the 'General Status' information, organized into sections: General, Hardware, Firmware, and Quick status.

General Status	
General	
IP address	172.29.194.78
NTP Server	193.162.159.194
Time	04-01-2013 14:32:00
Serial	8389545
MAC address	00:13:d1:80:03:a9
Product ID	0001 5CEF A9B0 19C6
Production Date	Before 31-08-2011
Hardware	
PartNo	14135720
PCS	PCS10_
Firmware	
PartNo	14188000
PCS	PCS13_
Build	40447
Quick status	
SIP	✓
Provisioning	⊗
NTP	✓

Log Information

This page provides information about the logs.

- 1 Click **Status**, and then click **Logs**.

Figure 2 Adm. Page Spectralink IP-DECT Server 400: Status/Logs page

No.	Timestamp	Type	Message
0	01-01-2008 01:00:10.144	notice	KGAP Admin 1.16.1 (40447) started
1	01-01-2008 01:00:10.158	info	Loading legacy certificate for HTTPS
2	18-12-2012 12:38:32.704	notice	NTP set time offset 219757102290552usec
3	18-12-2012 12:38:54.456	notice	KGAP 1.16.1 (40447) started
4	18-12-2012 12:38:54.485	info	Read 0 clusters from database.
5	18-12-2012 12:38:54.518	info	Read 2 users from database
6	18-12-2012 12:38:57.378	info	Loaded 142 CA certificates
7	18-12-2012 12:38:57.468	info	SIP user 5004 registered at 172.29.202.28
8	18-12-2012 12:38:57.507	info	SIP user 5003 registered at 172.29.202.28
9	18-12-2012 12:38:57.640	notice	Rtp (40447) started
10	18-12-2012 12:38:58.992	notice	BMC init. Ver: 0.0 build:40112 Testmode:0. Sw. PartNo:14127800 Pcs.PCS00_
11	18-12-2012 12:38:59.106	notice	LinkInfo: Sync to master (self)
12	18-12-2012 12:41:23.457	warning	KGAP Admin 1.16.1 (40447).IOHandler 'Httpd accept handler' used 3434ms.

- 2 From the **Display filter** list you can select between **emergency**, **critical**, **error**, **warning**, **notice**, or **info** depending on the logs you want to see.
- 3 Click **Export** if you want to save the log file in an exportable file (status_savelogs.tar).
- 4 Note when submitting an error report to spectralink support, an Exported log file is always required.



Note

When you submit an error report to Spectralink support, an exported log file is always required.

Wireless Server Information

This page provides information about the firmware version and ARI code of the Spectralink IP-DECT Server 400.

- 1 Click **Status**, and then click **Wireless Server**.

Figure 3 Adm. Page Spectralink IP-DECT Server 400: Status/WS page

Wireless Server Status	
General	
Firmware version	40447
ARI	000046544035 [00 04 d6 40 e8]
License information	
License max users	12
License features	
Service Status	
Wireless Server Uptime	17d 2h 0m 26s
Call establishment	Allowed
Subscription	Allowed

Packet Capture

The Packet Capture page is used to create traces in PCAP format for debugging. These traces can be viewed with the free protocol analyzer tool Wireshark (www.wireshark.org).

- 1 Click **Status**, and then click **Packet Capture**.
- 2 Select the appropriate filters and click **Start**. When finished click **Stop** and then **Save** to save the trace to your PC.

Figure 4 Adm Page Spectralink IP-DECT Server 400: Status/Packet Capture page

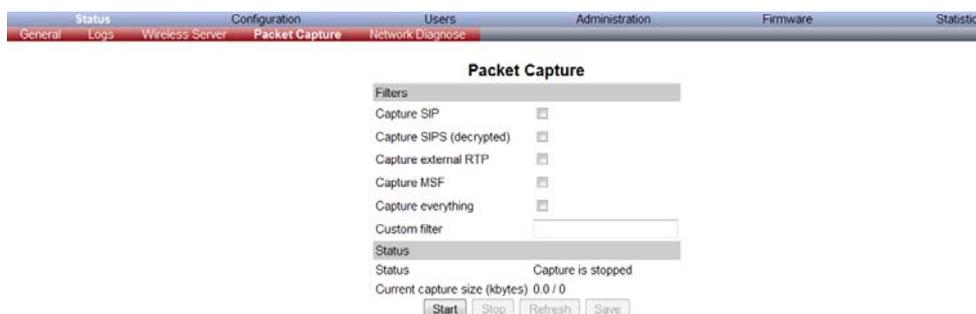


Table 1 Packet Capture

Field	Explanation
Packet Capture - Filters	
Capture SIP	Enable this check box to capture SIP signalling.
Capture SIPS (decrypted)	Capture decrypted SIPS(TLS) signaling
Capture external RTP	Enable this check box to capture voice communication. Please note that the available memory only allows for short time captures of voice communication
Capture MSF	Enable this check box to capture MSF signalling
Capture everything	Enable this check box to capture all network communication
Custom filter	Customize the captured data to a trace by entering a filter in pcap format.

Reading Statistics

Under **Statistics**, it is possible to read statistic information about the Spectralink IP-DECT Server 400, about active calls, abnormal releases in the system and traffic distribution. You get an over all overview of how the system is running.

Wireless Server

This page is useful to get information about traffic on the Spectralink IP-DECT Server 400 such as voice call traffic and message call traffic and it provides a summary of subscription and hand over statistics. It also provides information about the traffic load (Erlang) of the installation.

- Click **Reset Statistics** if you want to delete all statistic traffic information.

Figure 5 Adm. Page Spectralink IP-DECT Server 400: Statistics/WS page

Traffic Distribution						
Time	Voice calls	Abnormal releases	MSF calls	Voice calls total	Abnormal releases total	MSF calls total
00 - 01	0	0	0	0	0	0
01 - 02	0	0	0	0	0	0
02 - 03	0	0	0	0	0	0
03 - 04	0	0	0	0	0	0
04 - 05	0	0	0	0	0	0
05 - 06	0	0	0	0	0	0
06 - 07	0	0	0	0	0	0
07 - 08	0	0	0	0	0	0
08 - 09	0	0	0	0	0	0
09 - 10	0	0	0	0	0	0
10 - 11	0	0	0	0	0	0
11 - 12	0	0	0	0	0	0
12 - 13	0	0	0	11	0	2
13 - 14	0	0	0	2	0	0
14 - 15	0	0	0	0	0	0
15 - 16	0	0	0	0	0	0
16 - 17	0	0	0	0	0	0
17 - 18	0	0	0	0	0	0
18 - 19	0	0	0	0	0	0

Active Calls

This page is useful to get statistic information about active calls in the Spectralink IP-DECT Server 400 installation.

- 1 Click **Statistics**, and then click **Active Calls**.

Figure 6 Adm. Page Spectralink IP-DECT Server 400: Statistics/Active Calls page

Active Calls							
Established	Duration	Direction	State	Codec	Secure	Local user	Remote user

Abnormal Call Releases

This page is useful to get statistic information about abnormal call releases in a Spectralink IP-DECT Server 400 installation.

- 1 Click **Statistics**, and then click **Abnormal Releases**.

Figure 7 Adm. Page Spectralink IP-DECT Server 400: Statistics/Abnormal Releases page

Reason	Count
Total	0

Timestamp	PPID	RtpNo	Reason
-----------	------	-------	--------

Traffic Distribution

This page is useful to get statistic information about traffic distribution during the last 24 hours in a Spectralink IP-DECT Server 400 installation.

- 1 Click **Statistics**, and then click **Traffic Distribution**.

Figure 8 Adm. Page Spectralink IP-DECT Server 400: Statistics/Traffic Distribution page

Time	Voice calls	Abnormal releases	MSF calls	Voice calls total	Abnormal releases total	MSF calls total
00 - 01	0	0	0	0	0	0
01 - 02	0	0	0	0	0	0
02 - 03	0	0	0	0	0	0
03 - 04	0	0	0	0	0	0
04 - 05	0	0	0	0	0	0
05 - 06	0	0	0	0	0	0
06 - 07	0	0	0	0	0	0
07 - 08	0	0	0	0	0	0
08 - 09	0	0	0	0	0	0
09 - 10	0	0	0	0	0	0
10 - 11	0	0	0	0	0	0
11 - 12	0	0	0	0	0	0
12 - 13	0	0	0	11	0	2
13 - 14	0	0	0	2	0	0
14 - 15	0	0	0	0	0	0
15 - 16	0	0	0	0	0	0
16 - 17	0	0	0	0	0	0
17 - 18	0	0	0	0	0	0
18 - 19	0	0	0	0	0	0

Making a Back-Up of the Configuration File

When saving the configuration data you have an overall overview of the Spectralink IP-DECT Server 400 which is useful in case of problem solving.

- 1 Click **Configuration**, and then click **Import/Export**.

Figure 9 Adm. Page Spectralink IP-DECT Server 400: Configuration/Import/Export page

Import/Export configuration

Export configuration

Export

Import configuration

Import

- 2 Click **Save**.

Restoring the Configuration File

- 3 Click **Configuration**, and then click **Import/Export**.

Figure 10 Adm. Page Spectralink IP-DECT Server 400: Configuration/Backup/Restore page



- 4 Click **Browse**.
- 5 Select the file in question, and then click **Open**.
- 6 Click **Load**.
- 7 Click **OK**.

The configuration file is restored in the system.

Updating the Spectralink IP-DECT Server 400 Firmware

To update the firmware, you load a file to the system. Contact your distributor for the latest firmware.



Note

Do not power off the system during the firmware update process.

To Update the Spectralink IP-DECT Server 400 Firmware

- 1 Click **Firmware**, and then click **Wireless Server**.

Figure 11 Adm. Page Spectralink IP-DECT Server 400: Firmware/WS page



- 2 Click **Browse**.
- 3 Select the file in question, and then click **Open**.
- 4 Click **Update**, and the firmware is being updated.

Figure 12 Adm. Page: Firmware Update Progress Bar

Wait until the system has finished updating.

Figure 13 Adm. Page: Firmware update completed

- Optionally, you can block new calls during a firmware update by clicking **Administration**, and then **Wireless Server**.

Figure 14 Adm. Page Spectralink IP-DECT Server 400: Administration/WS page

- Under **Service Status** click **Block**.
- Click **Reboot** to update the Spectralink IP-DECT Server 400 firmware.
- If you have blocked new calls during a firmware update, enable new calls again by clicking **Administration**, then **Wireless Server** and then clicking **Allow**.

Reboot is required before the firmware update applies.

Multicell Installation

The Spectralink IP-DECT Server 400 is in its basic edition a single cell system (one built-in base station in the server).

Additional IP base stations can be added to the Spectralink IP-DECT Server 400 server to expand the covered area. A license is required to enable the multicell function. Licenses are added under "Administration/License".

Note: no special IP base station is required to function with the Spectralink IP-DECT Server 400. All Spectralink IP-DECT Base Station models can be used.

Up to 3 additional Spectralink IP-DECT Base Stations can be added to the Spectralink IP-DECT Server 400 server system and up to 3 additional DECT Repeaters can be added to each IP-DECT Base Station. This results in up to 12 DECT Repeaters if all IP-DECT Base Stations are registered.

To Add IP-DECT Base Stations to the Server

To enable IP-DECT Base Stations for use with the Spectralink IP-DECT Server 400, the P-DECT Base Station needs to know the IP address of the Spectralink IP-DECT Server 400. This can be provisioned by a DHCP server to the IP-DECT Base Stations. See the Provisioning Guide on www.spectralink.com for more information. Alternatively, you can access the IP-DECT Base Station web user interface manually and enter the IP address of the Spectralink IP-DECT Server 400. The Login information is the same as on the Spectralink IP-DECT Server 400.



Note

When using Multicell function on the Spectralink IP-DECT Server 400, a Static IP address is highly recommended for the Spectralink IP-DECT Server 400. IP base stations can still use DHCP options.



Note

The base station tab, “Administration/Basestation”, is only visible when a multicell license has been loaded on to the server.

Synchronization of IP base stations

IP base stations must be synchronized over AIR (sync). A sync chain can be programmed as a serial string from base station 0 to base1 to base2 to base3 or in parallel from base 0 to base1,2,3 or a combination of both. The Spectralink IP-DECT Server 400 is the Master in the sync chain setup and is by default named 0 (zero)

All synchronization is programmed on the server's web interface under base stations “Administration/Basestation”. The first base station number 0 (zero) is the built-in base in the server. The 3 remaining bases appear when they are discovered by the server.

As default action additional base station use the sync master (zero) as sync reference (Parallel sync setup). All IP base stations sync on the Spectralink IP-DECT Server 400 server. You can change this by selecting the relevant base station and changing the primary/secondary sync field to the base stations that should be the next hop in the sync chain.

Figure 15 Base Station Configuration

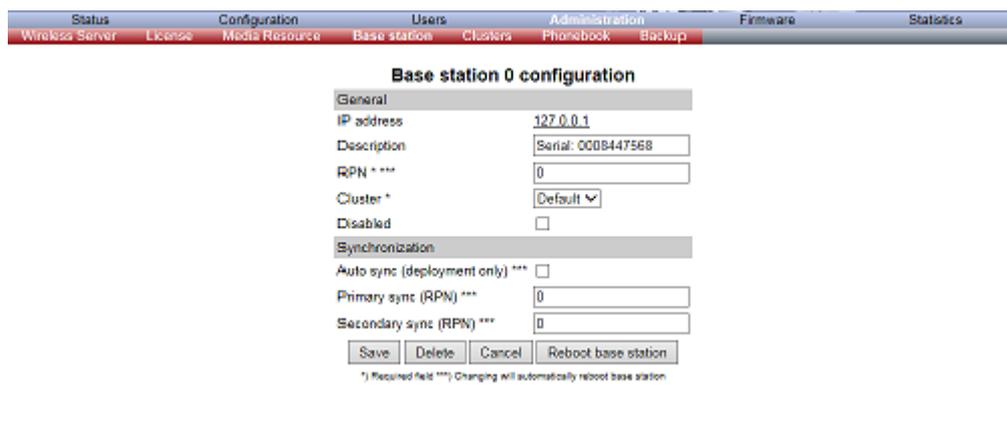


Figure 16 Base Station Overview



In the example above, there are two bases in the Spectralink IP-DECT Server 400 solution. Base station 1 is Synchronization on base 0 (Zero). Repeaters are not visible in the server, and are add-ons to the system and are not manageable by the system. A repeater is managed directly on the repeater itself using a PC and a repeater programming kit.

Multicell Components

The following components are available in a Spectralink IP-DECT Server 400 multicell setup. All components are optional. A multicell license is required.

Table 2 Multicell components

Component	Amount
Spectralink IP-DECT Server 400	1
IP Bases	3
Repeaters	12
Multicell license	1

Chapter 7: Regulatory Notices

International Regulatory and Product Information

Spectralink IP-DECT Server 400 is electrically identical (including its RF characteristics) to Spectralink DECT BASE K005.

	<p>This Spectralink product has been marked with the CE mark. This mark indicates compliance with EEC Directives 1999/5/EC. A full copy of the Declaration of Conformity can be obtained from Spectralink Europe ApS, Langmarksvej 34, 8700 Horsens, Denmark</p>
---	---

Cesky [Czech]:	Spectralink tímto prohlašuje, že tento Spectralink IP-DECT Server 400 je ve shode se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]:	Undertegnede Spectralink Europe ApS erklærer herved, at følgende udstyr Spectralink IP-DECT Server 400 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]:	Hiermit erkläre Spectralink Europe ApS, dass sich das Gerät Spectralink IP-DECT Server 400 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]:	Käesolevaga kinnitab Spectralink Europe ApS seadme Spectralink IP-DECT Server 400 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English:	Hereby, Spectralink Europe ApS declares that this Spectralink IP-DECT Server 400 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]:	Por medio de la presente Spectralink Europe ApS declara que el Spectralink IP-DECT Server 400 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]:	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Spectralink Europe ApS ΔΗΛΩΝΕΙ ΟΤΙ Spectralink IP-DECT Server 400 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français [French]:	Par la présente Spectralink Europe ApS déclare que l'appareil Spectralink IP-DECT Server 400 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano [Italian]:	Con la presente Spectralink Europe ApS dichiara che questo Spectralink IP-DECT Server 400 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Íslenska (Icelandic):	Hér með lýsir Spectralink Europe ApS yfir því að Spectralink IP-DECT Server 400 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC
Latviski [Latvian]:	Ar šo Spectralink Europe ApS deklare, ka Spectralink IP-DECT Server 400 atbilst Direktivas 1999/5/EK būtiskajam prasibam un citiem ar to saistitajiem noteikumiem.
Lietuviu [Lithuanian]:	Šiuo Spectralink Europe ApS deklaruoja, kad šis Spectralink IP-DECT Server 400 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]:	Hierbij verklaart Spectralink Europe ApS dat het toestel Spectralink IP-DECT Server 400 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]:	Hawnhekk, Spectralink Europe ApS, jiddikjara li dan [il-mudel tal-prodott] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar [Hungarian]:	Alulírott, Spectralink Europe ApS nyilatkozom, hogy a Spectralink IP-DECT Server 400 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Norsk [Norwegian]:	Spectralink Europe ApS erklærer herved at utstyret Spectralink IP-DECT Server 400 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Polski [Polish]:	Niniejszym Spectralink Europe ApS oświadcza, że Spectralink IP-DECT Server 400 jest zgodne z zasadniczymi wymaganiami oraz innymi stosownymi postanowieniami Dyrektywy 1999/5/WE
Português [Portuguese]:	Spectralink Europe ApS declara que este Spectralink IP-DECT Server 400 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]:	Spectralink Europe ApS izjavlja, da je ta Spectralink IP-DECT Server 400 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]:	Spectralink Europe ApS týmto vyhlasuje, že Spectralink IP-DECT Server 400 splna základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]:	Spectralink Europe ApS vakuuttaa täten että Spectralink IP-DECT Server 400 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]:	Härmed intygar Spectralink Europe ApS att denna Spectralink IP-DECT Server 400 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Explosive Device Proximity Warning

	Warning. Do not operate your wireless network device near unshielded blasting caps or in an explosive environment unless the device has been modified to be especially qualified for such use.
---	---

Waarschuwing	Gebruik dit draadloos netwerkapparaat alleen in de buurt van onbeschermd ontstekers of in een omgeving met explosieven indien het apparaat speciaal is aangepast om aan de eisen voor een dergelijk gebruik te voldoen.
Varoitus	Älä käytä johdotonta verkkolaitetta suojaamattomien räjäytysnallien läheisyydessä tai räjäytysalueella, jos laitetta ei ole erityisesti muunnettu sopivaksi sellaiseen käyttöön.
Attention	Ne jamais utiliser un équipement de réseau sans fil à proximité d'un détonateur non blindé ou dans un lieu présentant des risques d'explosion, sauf si l'équipement a été modifié à cet effet.
Warnung	Benutzen Sie Ihr drahtloses Netzwerkgerät nicht in der Nähe ungeschützter Sprengkapseln oder anderer explosiver Stoffe, es sei denn, Ihr Gerät wurde eigens für diesen Gebrauch modifiziert und bestimmt.
Avvertenza	Non utilizzare la periferica di rete senza fili in prossimità di un detonatore non protetto o di esplosivi a meno che la periferica non sia stata modificata a tale proposito.
Advarsel	ikke bruk den trådløse nettverksenheten nært inntil uisolerte fenghetter eller i et eksplosivt miljø med mindre enheten er modifisert slik at den tåler slik bruk.
Aviso	Não opere o dispositivo de rede sem fios perto de cápsulas explosivas não protegidas ou num ambiente explosivo, a não ser que o dispositivo tenha sido modificado para se qualificar especialmente para essa utilização.
¡Advertencia!	No utilizar un aparato de la red sin cable cerca de un detonador que no esté protegido ni tampoco en un entorno explosivo a menos que el aparato haya sido modificado con ese fin.
Varning!	Använd inte den trådlösa nätverksenheten i närheten av oskyddade tändhättar eller i en explosiv miljö om inte enheten modifierats för att kunna användas i sådana sammanhang.

	<p>The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately.</p>
---	--

<p>Appropriate RF safety/installation information</p> <p>The product is intended to be installed by authorized personal. The product shall be installed in accordance with FCC rules.</p>
--

<p>RF Exposure Statement</p> <p>The EUT is considered as a mobile device according to OET Bulletin 65, Edition – 97 – 01. Therefore distance to human body of min. 20 cm is determined.</p> <p>The internal / external antennas used for this mobile transmitter must provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction</p>
--

<p>Warning</p> <p>This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. The above warning is inserted for regulatory reasons. If any customer believes that they have an interference problem, either because their Spectralink product seems to cause interference or suffers from interference, they should contact their distributor immediately. The distributor will assist with a remedy for any problems and, if necessary, will have full support from Spectralink.</p>

Safety

WARNING!

Only qualified service personnel may install this equipment. The instructions in this manual are intended for use by qualified service personnel only.

Only qualified persons should service the system.

The installation and service of this hardware is to be performed only by service personnel having appropriate training and experience necessary to be aware of hazards to which they are exposed in performing a task and of measures to minimize the danger to themselves or other persons.

Electrical shock hazards from the telecommunication network and AC mains are possible with this equipment. To minimize risk to service personnel and users, the system must be connected to an outlet with a third-wire Earth.

Service personnel must be alert to the possibility of high leakage currents becoming available on metal system surfaces during power line fault events near network lines. These leakage currents normally safely flow to Protective Earth via the power cord. Therefore, it is mandatory that connection to an earthed outlet is performed first and removed last when cabling to the unit. Specifically, operations requiring the unit to be powered down must have the network connections (exchange lines) removed first.

Important Safety Instructions and Product Information

Before using your telephone equipment, you should always follow basic safety instruction to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

- 1** Read and understand all instructions
- 2** Follow all warnings and instructions including those marked on the product
- 3** Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning
- 4** Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool
- 5** The product should be operated only from the type of power source indicated on the instructions. If you are not sure of the type of power supply, consult your dealer or local power company.
- 6** Do not overload wall outlets and extension cords as this can result in fire or electrical shock.
- 7** Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out s that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.

- 8 To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassemble can cause electrical shock when the appliance is subsequently used. If the product need repair, consult your dealer.
- 9 This product does not support connections to outside plant.
- 10 Refer servicing to qualified service personnel under the following conditions:
 - If liquid has been spilled into the product
 - If the product has been exposed to rain or water
 - If the product does not operate normally when following the operating instructions in the manual. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by qualified service personnel to restore the product to normal operation.
 - If the product has been dropped or cabinet has been damaged
 - If the product exhibits a distinct change in performance

Warning

- 1 Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning
- 2 Do not use the telephone to report a gas leak in the vicinity of the leak
- 3 Do not place the unit near microwave ovens, radio equipment, or non-ground connected televisions. These appliances may cause electrical interference to the base or handset
- 4 Installation must be performed in accordance with all relevant national wiring rules
- 5 Plug acts as Disconnect Device - The socket outlet to which this apparatus is connected must be installed near the equipment and must always be readily accessible
- 6 The system will not operate in the event of a blackout. Please keep a backup phone for emergencies

Intrinsic safety

Do not install the unit in conditions where there is a danger of electrically ignited explosions.

Exposure to sunlight, heat and moisture

Do not expose the unit to direct sunlight for long periods. Keep away from excessive heat and moisture.

Spare parts and accessories

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

RF compliance information

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the y responsible for compliance could void the user's authority to operate the equipment.

NOTICES

FCC Note: This device complies with 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may may cause undesired operation. Contains: FCC ID: PXA-PK4587.

IC Note: Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the certification /registration number only signifies that the Industry Canada technical specifications were met. Contains: IC: 4604A-PK4587.

Privacy of communications may not be ensured when using this telephone.

Information to user: The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the y responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

This limited, non-transferable warranty is provided to the original purchaser. The product is warranted to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year from the date of purchase as shown on the purchaser's receipt.

Our obligation under this warranty is limited to repair or replacement (at our option) of the product or any (s) which are defective provided that the product is returned to the original place of purchase or an authorized service location during the warranty period. Products returned must be accompanied by a copy of the purchase receipt. In the absence of a purchase receipt, the warranty period shall be one (1) year from the date of manufacture. Repair or replacement of the product is your sole and exclusive remedy.

If the product is repaired, reconditioned component s or materials may be used. If the product is replaced, we may replace it with a new or reconditioned product of the same or similar design. The repaired product will be warranted for either (a) 90 days or (b) the remainder of the original one (1) year warranty period, whichever is longer.

This warranty does not apply to the defects outside of our control, including but not limited to acts of God, fire, flood and damage while in transit to service facility. We do not warranty that the product will be compatible with any telephone equipment, systems or y lines.

This warranty shall be void if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or y other than our authorized service facility, or any violation of instructions furnished by us.

This warranty is also void if this product is removed from the country in which it was purchased by the original purchaser, if it is used in a country in which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. We assume no responsibilities for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it was intended.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. WE DISCLAIM ANY LIABILITY FOR DAMAGES FOR LOSS OF USE OF THE PRODUCTS, LOSS OF TIME, INCONVENIENCE, INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT, LOSS OF REVENUE OR PROFIT OR DAMAGES FOR ANY FAILURE TO PERFORM. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF WE ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty is the sole and exclusive warranty provided for the product. There are no other express warranties. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Chapter 8: Open Source Software Notice

Open Source Software Notice

This product includes certain open source or other software originated from third parties that are subject to the GNU General Public License (GPLv2), GNU Library/Lesser General Public License (LGPLv2) and different and/or additional copyright licenses, disclaimers and notices. Please refer to the exact terms of the GPLv2 and LGPLv2 regarding your rights under said license. You may obtain a complete corresponding machine-readable copy of the source code of such software under the GPLv2 or LGPLv2 from

<http://support.spectralink.com/SpectralinkService/support/us/support/voice/index.html>.

Alternatively, Spectralink (Denmark) offers to provide such source code to you on CD-ROM for a charge covering the cost of performing such distribution, such as the cost of media, shipping and handling, upon written request to Spectralink (Denmark) at:

Source Code Requests
Spectralink Europe Aps
Langmarksvej 34
DK-8700 Horsens
Denmark

This offer is valid for a period of three (3) years from the date of the distribution of this product by Spectralink (Denmark).

Figures

Overview of the Whole Solution	3
Spectralink IP-DECT Server 400 - Front view	8
Spectralink IP-DECT Server 400 - Faceplate	8
Spectralink IP-DECT Server 400 Wall Mounting	10
External antenna	11
Main page of the Administration Page for Spectralink IP-DECT Server 400	13
Adm. Page Spectralink IP-DECT Server 400: Configuration/General page	13
Adm. Page Spectralink IP-DECT Server 400: Configuration/Security Configuration page	15
Adm. Page Spectralink IP-DECT Server 400: Configuration/SIP page	15
Adm. Page Spectralink IP-DECT Server 400: Users/User List page	19
Adm. Page Spectralink IP-DECT Server 400: Users/User List/User page	19
Adm. Page Spectralink IP-DECT Server 400: Search for Users/List Users page	23
Adm. Page Spectralink IP-DECT Server 400: Users/User List/User page	23
Adm. Page Spectralink IP-DECT Server 400: Users/User List /User page	24
Example of Handset Registration Data in CSV Format	24
Adm. Page Spectralink IP-DECT Server 400Version 3.0: Users/Import/Export page	25
Adm. Page Spectralink IP-DECT Server 400: Status/General page	26
Adm. Page Spectralink IP-DECT Server 400: Status/Logs page	27
Adm. Page Spectralink IP-DECT Server 400: Status/WS page	27
Adm Page Spectralink IP-DECT Server 400: Status/Packet Capture page	28
Adm. Page Spectralink IP-DECT Server 400: Statistics/WS page	29
Adm. Page Spectralink IP-DECT Server 400: Statistics/Active Calls page	29
Adm. Page Spectralink IP-DECT Server 400: Statistics/Abnormal Releases page	29
Adm. Page Spectralink IP-DECT Server 400: Statistics/Traffic Distribution page	30
Adm. Page Spectralink IP-DECT Server 400: Configuration/Import/Export page	30
Adm. Page Spectralink IP-DECT Server 400: Configuration/Backup/Restore page	31
Adm. Page Spectralink IP-DECT Server 400: Firmware/WS page	31
Adm. Page: Firmware Update Progress Bar	31
Adm. Page: Firmware update completed	32
Adm. Page Spectralink IP-DECT Server 400: Administration/WS page	32
Base Station 0 Configuration	34
Base Station Overview	34

Tables

Initial SystemAccess	1
List of Acronyms	2
Overview of System Capacity	4
Spectralink IP-DECT Server 400 Part Numbers	7
LED Indicator Description - Front Cover	9
LED Indicator Description - Faceplate	9
Reset Button Description	9
System Access	12
Packet Capture	28
Multicell components	34